

REMOVING THE SEAT HEAD REST

OK, first the banging and force pulling method is OUT !!!!

All of the Bravo/a seat head rests can be removed whit ease.
You only need these pliers (don't know the right name ;))



The next step is to pull up the head rest and grip the pins whit these pliers.

WARNING : Put some thick cloth under them plieers, or the plastic will get “eaten“ !!!!!!!



These files are free for private use, hosting them on web sites is allowed only by contacting the author.
Files where made by SvenJTD (<http://free-zg.t-com.hr/svenjtd/>), a member of

BOO – Bravo/a owners organization  (www.fiatboo.co.uk)

Then when you have a good grip, turn the pliers in **CLOCKWISE** direction for 90°. You will feel something give away and it will turn more easy, that is the lock giving away. After you have done that, just pull the head rest out of the seat.



And that's it, all done !

To put all together back, just plug in the head rest and turn the pins **ANTI** clockwise.

These files are free for private use, hosting them on web sites is allowed only by contacting the author.
Files where made by **SvenJTD** (<http://free-zg.t-com.hr/svenjtd/>), a member of

BOO – Bravo/a owners organization  (www.fiatboo.co.uk)