


## Replacing your Windscreen Washer Jets to the 'Mist' Type Suitable for Fiat Bravo/a & Marea

This guide will show you how to fit 'Citroën/Peugeot Windscreen Washer Mist Jets' into your Fiat Bravo. Please read this guide through at least once before fitting.

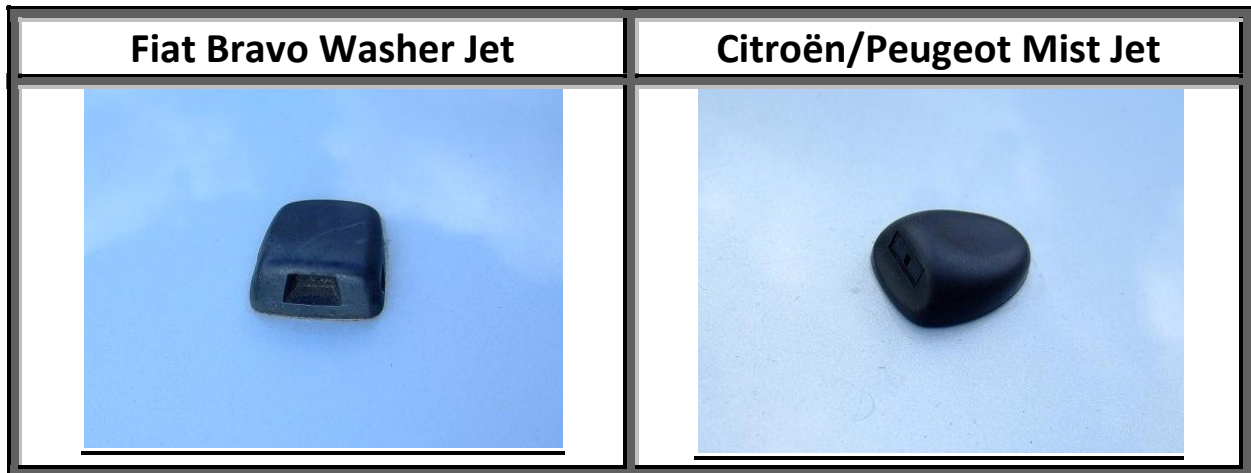

Your first step is to purchase the 'Citroën/Peugeot Mist Washer Jets' from the dealership. Part number 6438.V8. They come as a pair for approximately £6.



## **Step2.** Fiat Windscreen Washer Jet Removal

Open the bonnet and remove the following plastic studs to gain access to the underside of the washer jets. I have circled the main ones; you can remove more if required.




## **Step3.** Remove existing Windscreen Washer Jets

Carefully remove the washer pipe tubing from the washer jet nozzle. Then with pliers press both sides of the washer jet and push the washer jet out of the bonnet. Repeat for the next side.

**Step4.** Create a Support to hold the new Washer Jet in place

Due to the size of the old washer jet the new Citroën washer jet will not fit perfectly into the hole in the Bravo/a and Marea's bonnet without a support. To create the support I used an empty plastic bottle, I cut out two squares approx 4cm x 5cm from the plastic bottle and carefully with a craft knife I cut a cross in the middle. Going left to right I cut a small slit approx 3mm. See photo.

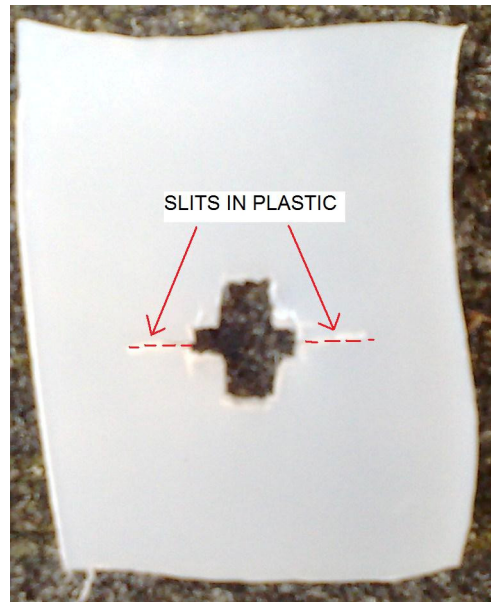

**Step5.** Custom fit the new Washer Jet to your bonnet

Get a friend to help you, and then get your friend to hold the washer jet to the bonnet, while from underneath you push the plastic support you made over the nozzle until you clip it behind the clips on the new washer jet. I used a craft knife to carefully shape the plastic some more until I got it perfect. With a little bit of trial an error you'll get it on perfectly



## **Step6.**

Repeat Steps 3 to 5 for the other side. Refit the washer pipe tubing and place a cable tie on the end to prevent it coming off during winter. Adjust the sound proofing and refit the plastic clips under the bonnet. It should take you about 20 minutes to get them both on as long as you have the necessary tools.

You have now successfully installed the Mist type washer jets to your Bravo. Enjoy.

